



ConnectPro™

How to install a TV above your fireplace.



Before you get started, it's important to know that most building codes in Canada require you to have a certified electrician run your high voltage wires or power cables through the wall.

Once this is done and you've picked the right sized mount for your TV, you will also need the following parts and tools:



- A. Couple of mud ring retro boxes and cover plates
- B Stud finder
- C. Pencil
- D. Level
- E. Fishtape
- F. Drill
- G. Screwdriver
- H. Cable ties
- I. Wrench or socket


We also recommend laying down drop cloths to make clean up much easier.






ConnectProTM

How to install a TV above your fireplace.

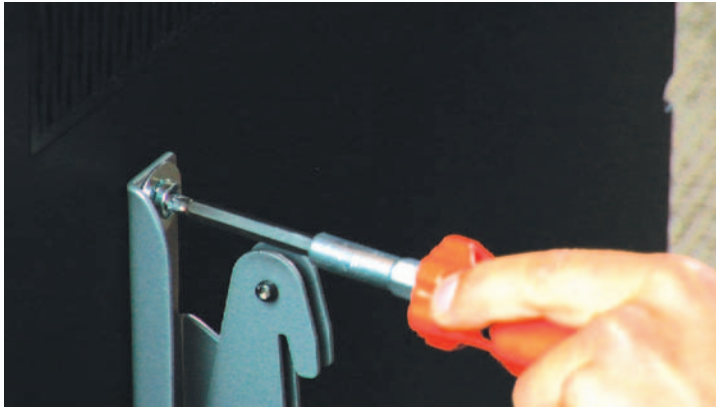

Your first step is to attach the wall mount brackets to the back of the TV.

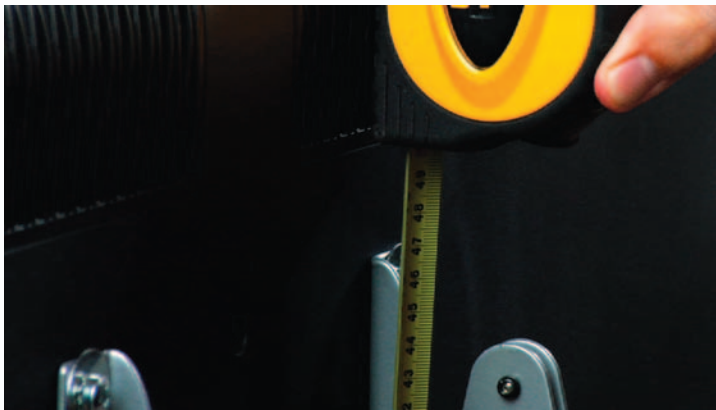

You will need to measure the mount brackets to the base of the TV to determine the height to be installed above the mantle. Make sure to leave room for any items you may want to display.

Once this is completed, determine the location of the wall plate from the top of the mantle and mark the appropriate height.




Take out your stud finder and locate adequate load bearing supports.




ConnectProTM

How to install a TV above your fireplace.

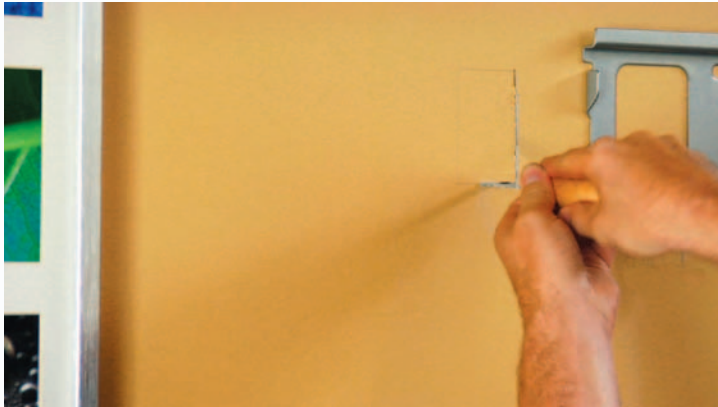

The next step is to install two mud ring retro boxes.

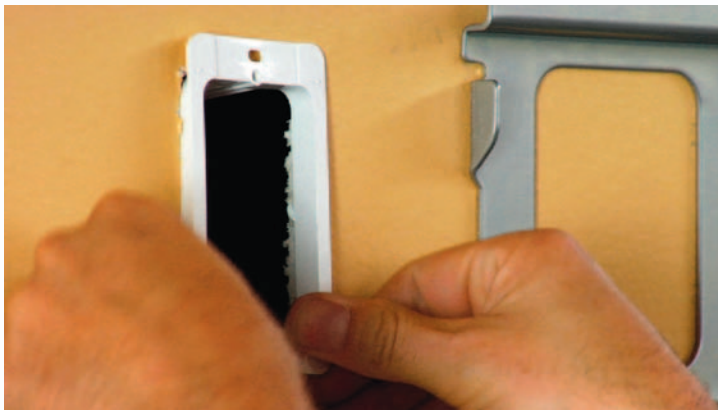

Put one near the components and the other behind the TV. Using your fish tape feed your low voltage A/V cabling from one box to the other and install your cover plates.

Now lift the TV and hang it onto the plate, making sure it's level.

Apply the locking bolts to the bracket, and connect the cables to the TV and your components.





ConnectProTM

How to install a TV above your fireplace.



Before you're done, make sure to calibrate your system and consolidate your remotes for easy use.

Congratulations on installing a TV above your fireplace. If you have any questions visit a Future Shop and speak to a ConnectPro Expert.

