




ConnectPro™

How to install the essential package.

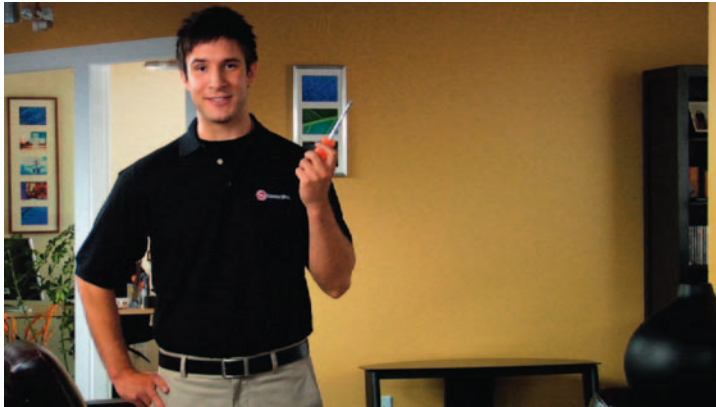

Before you get started, you're going to need to make a few decisions:

- A. Where you want your TV
- B. Location of your stereo components
- C. Your speaker locations


You will also need a screwdriver for basic assembly.

Your first step will be to assemble the speakers and stands.

This is usually easy and will only require your screwdriver and some included screws.

Once completed, place the TV and the components on the stand and hook everything up using the appropriate cables.

Remember to use tie straps to keep your cables well managed.

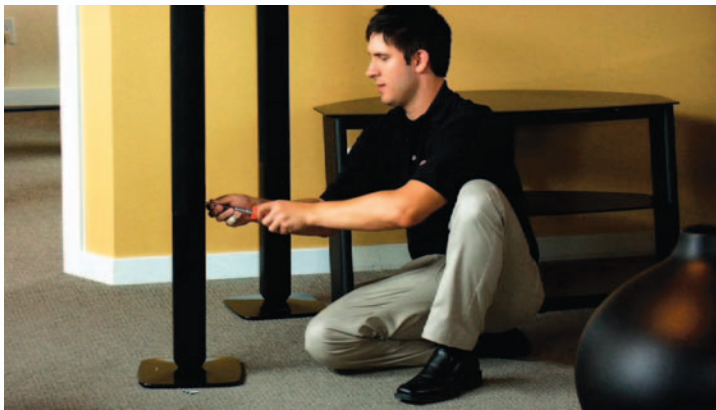



ConnectPro™

How to install the essential package.



Now place the speakers in the optimal locations.

Usually this means the centre channel in front of you as close to the center of the TV as possible; the right and left front speakers to each side of the TV, and the rear left and right speakers sitting in the back of the room parallel to the front speakers. Run the rear speaker cables as inconspicuously as possible by using self adhesive tabs to attach the cables to the baseboards, or if possible, tuck the wire under the baseboards.



All cables from the speakers will be plugged into the receiver.

The receiver will have details about which wires go where. Make sure you pay attention to negative and positive on your wires. One wire will usually be marked with a black stripe, indicating negative.



Make sure to calibrate your receiver to ensure it's functioning properly, and adjust the settings to enjoy surround sound.

That's all there is to it. If you have more questions or need some help, visit us at Future Shop and speak to a ConnectPro Expert.