



ConnectPro™

How to wall-mount your flat-panel HDTV.



Before you get started, you'll going to need the following tools:

Stud finder

Pencil

Level

Wrench or socket.

Tape measure

Cable ties

Zip tie holders

Screwdriver

Drill



We also recommend that you lay down some drop cloths to protect your belongings and make clean up much easier.

Your first step is to assemble the wall mount brackets to the back of the TV.

There are usually 4-6 screws that will simply screw to the back of the set.

Next, measure the mount brackets to the base of the TV; this will allow you to determine the minimum height to the bottom of the TV.



For optimum placement, consider the lighting in your room and distance from your TV.



ConnectProTM

How to wall-mount your flat-panel HDTV.



Now measure and mark the location you want to mount the TV to on your wall with a pencil; this is where the wall plate will go.

Use your stud finder to find the best place to mount the plate, and mark that location.



Attach the wall plate with the lag bolts and washers that were provided with your TV mount, and use your level to ensure it's straight.

Once completed, lift and hang the TV onto the wall plate and double check to make sure it's still level.


Tighten the lock bolts to ensure the TV mounts are secured, and attach any associated cabling.





ConnectPro™

How to wall-mount your flat-panel HDTV.

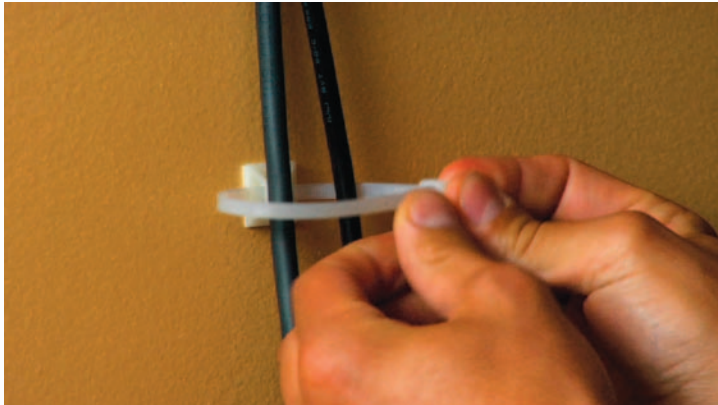

To keep things neat, bundle all the cabling using cable ties all the way down to the components.

Finish up by using self-adhesive wall anchors and apply them about every 12 to 18 inches along the wire path.

Then attach all cabling to the components again using cable ties to keep things orderly.



Before you're done, you need to ensure it's functioning properly and we suggest you consolidate your remotes for ease of use.

Congratulations on installing your wall-mounted TV. If you have any questions, visit a Future Shop and talk to a ConnectPro Expert.